

Loose Tube Cutter LTC-01



The loose tube cutter (LTC-01) is the special tool for removing the loose tube without damage to the UV coated optical fiber inside the loose tube.

LTC-01 is applicable to the loose tube that shall be shown in the table below, in combination with guide slit and cushion.



Close the clamp lever, and notch the loose tube surface with blade by revolving the loose tube cutter (LTC-01).



Break the loose tube at notching point and pull out the broken loose tube.



Outer diameter of loose tube	Inner diameter of loose tube
0.9mm	0.6mm
1.0mm	0.6mm
1.6mm	0.8mm
2.4mm	1.4mm
3.0mm	2.0mm

Specifications and descriptions are subject to change without prior notice.

Fujikura Ltd.

1-5-1, Kiba, Koto-ku, Tokyo 135-8512, Japan

Phone : +81-3-5606-1164 Fax : +81-3-5606-1534 <http://www.fujikura.co.jp>

Fujikura Asia Ltd.

438A Alexandra Road, Block A Alexandra Technopark #08-03 Singapore 119967

Phone : +65-6-278-8955 Fax : +65-6-278-0965 <http://www.fujikura.com.sg>

Fujikura Europe Ltd.

C51 Barwell Business Park, Leatherhead Road, Chessington, Surrey KT9 2NY, UK

Phone : +44-20-8240-2000 Fax : +44-20-8240-2010 <http://www.fujikura.co.uk>

AFL Telecommunications

260, Parkway East, Duncan, SC29334, USA

Phone : +1-800-235-3423 Fax : +1-800-926-0007 <http://www.aflglobal.com>

Fujikura (China) Co., Ltd.

16th Floor, Shanghai Hang Seng Bank Tower, 1000 Lujiazui Ring Road, Pudong New Area, Shanghai 200120, CHINA

Phone : +86-21-6841-3636 Fax : +86-21-6841-2070 <http://www.fujikura.com.cn>